

6-3. Initialization

Items to initialize

After reconnecting or performing maintenance on the 12 volt battery, the following items must be initialized for normal system operation.

Item	When to initialize	Reference
Intuitive parking assist	<ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse	P. 507
Engine oil maintenance data	<ul style="list-style-type: none">• After changing engine oil	P. 412
Tire pressure warning system	<ul style="list-style-type: none">• When rotating the tires on vehicles differing with front and rear tire inflation pressures.• When changing the tire inflation pressure by changing traveling speed or load weight, etc.• When changing the tire size.	P. 423

6-3. Initialization